



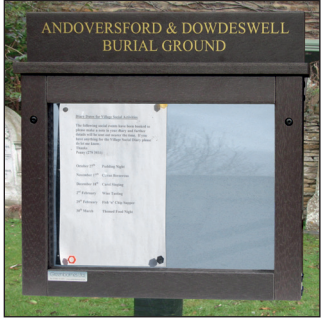

Assembly Instructions for Smallboards in Man-made Timber

WALL MOUNTED

- Drill out 4 no partly drilled counter-sunk holes using 5mm. (13/64") drill.
- Fasten the board to wall with the screws provided. The plastic sealing washers are located between the board and the wall. Wallplugs are supplied.

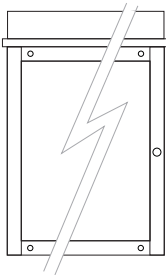


FREESTANDING

HPPK

Boards PSB4P, PSB4L only

- Drill out 2 no partly drilled counter-sunk holes using 5mm. (13/64") drill.
- Fasten the board to the posts with the screws provided. The plastic sealing washers are located between the board and the posts. These should be drilled with 3mm (1/8") pilot holes to accept the screws.
- Concrete the posts approximately 600mm. (2ft.) into the ground.
- Posts must be plumb and level

HPPK Boards PSB4P, PSB4L only

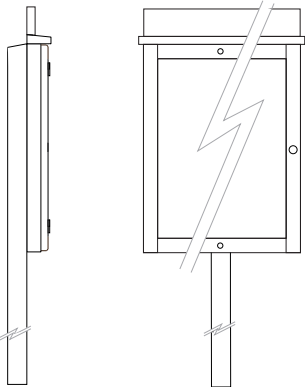

PPK

All boards


- Drill out 4 no partly drilled counter-sunk holes using 5mm. (13/64") drill.
- Fasten the board to the posts with the screws provided. The plastic sealing washers are located between the board and the posts. These should be drilled with 3mm (1/8") pilot holes to accept the screws.

Distance between posts (x on diagram)

Board Code	(x) Distance (mm)
PSBA4P	90mm
PSBA4L	177mm
PSBA3P	177mm
PSBA3L	300mm
PSBA2P	300mm
PSBA2L	474mm

- Concrete the posts approximately 600mm. (2ft.) into the ground.
- Posts must be plumb and level

PPK

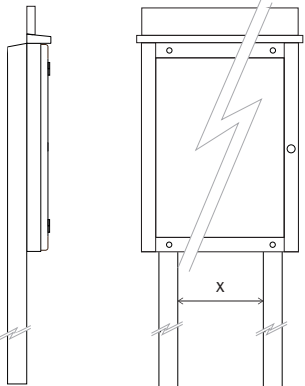

Damaged Items

In the unlikely event of damage occurring in transit, please advise us of this within **24 hours of receipt**, in order that we may claim against the carriers.