







## Assembly Instructions for Man Made Timber (MmT) Noticeboards

## **WALL MOUNTED**

- Drill out the partly drilled counter-sunk holes 4no [single and 2 Bay] or 6no [3 bay] 6mm. (15/64") as per drawing. Exact positions may be varied to suit surface to be mounted to (but not nearer to the edge of the each bay).
- Fasten the board to the wall using screws and wall plugs supplied.

# **FREESTANDING**

# Single Post

#### For board P3A4 only

- Drill 2 no counter-sunk holes 6mm (15/64") as per drawing.
- Drill 3.5mm (9/64") pilot holes in the post and fasten the board to the post using screws supplied.
- Concrete the post Minimum 600mm (24") into the ground & with 450mm square footing

Post must be plumb and level.

### 2 Post

• Drill out 4 no partly drilled counter-sunk holes 6mm (15/64") as per drawing.

#### **Distance between posts** (x on diagram)

	<b>Board Code</b>	(x) Distance (mm)
Single Bay	P3A4	129
	PSN	372
	P6A4	549
	P6A4P	339
	P9A4	549
	PLN	600
	PL8A4	758
	PL10A4	982
2 Bay	PDN	982
	PD6A4	996
	PD6A4P	916
	PD9A4	996
	PDLN	1098

#### 3 Post

• Drill out 6 no partly drilled counter-sunk holes 6mm. (15/64") as per drawing.

#### **Distance between posts** (x on diagram)

	<b>Board Code</b>	(x) Distance (mm)
2 Bay	PDL8A4	833 (x2)
	PDL10A4	1057 (x2)
3 Вау	PT6A4	1017 (x2)
	PT9A4	1017 (x2)
	PTN	840 (x2)
	PT6A4P	790 (x2)


Then Drill 3.5mm. (9/64") pilot holes in the post and fasten the board to the post using screws supplied.


Concrete the post Minimum 600mm (24") into the ground & with 450mm square footing

Post must be plumb and level.

### **Maintenance**

Every year lubricate hinges and locks with grease.

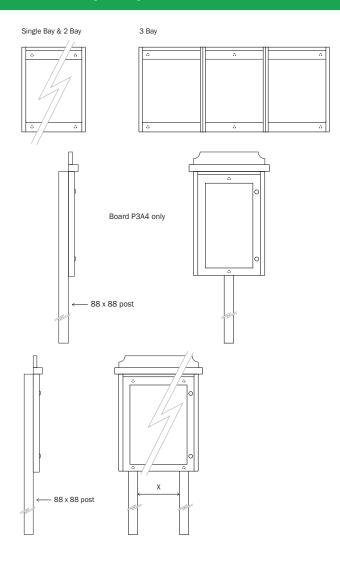

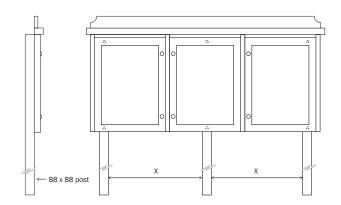

# **Damaged Items**

In the unlikely event of damage occurring in transit, please advise us of this within **24 hours of receipt**, in order that we may claim against the carriers.