




MARCH 2019

Assembly Instructions for Smallboards in Oak

WALL MOUNTED

- Drill out 4 no. partly drilled counter-sunk holes using 5mm (13/64") drill.
- Fasten the board to wall with the screws provided. The plastic sealing washers are located between the board and the wall. Wallplugs are supplied.

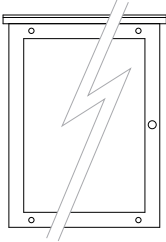


FREESTANDING

HPK

Boards SBA4P, SBA4L, SBA3P, SBA3L only

- Drill out 2 no. partly drilled counter-sunk holes using 5mm (13/64") drill.
- Fasten the board to the posts with the screws provided. The plastic sealing washers are located between the board and the posts. These should be drilled with 3mm (1/8") pilot holes to accept the screws.
- Concrete the posts approximately 600mm (2ft.) into the ground.
- Posts must be plumb and level

HPK Boards SBA4P, SBA4L, SBA3P, SBA3L only

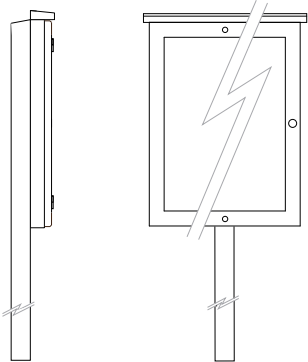

PK


All boards

- Drill out 4 no. partly drilled counter-sunk holes using 5mm (13/64") drill.
- Fasten the board to the posts with the screws provided. The plastic sealing washers are located between the board and the posts. These should be drilled with 3mm (1/8") pilot holes to accept the screws.

Distance between posts (x on diagram)

Board Code	(x) Distance (mm)
SBA4P	140mm
SBA4L	187mm
SBA3P	227mm
SBA3L	310mm
SBA2P	350mm
SBA2L	484mm

PK

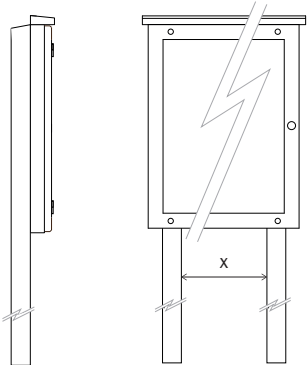

- Concrete the posts approximately 600mm (2ft.) into the ground.
- Posts must be plumb and level

Maintenance

Every year lubricate hinges and locks with grease.
Every 2-3 years remove surface dirt and apply one coat of woodstain.
Light Oak/Ronseal QD Satin Natural Oak Woodstain.
Dark Oak/Ronseal QD Satin Dark Oak Woodstain.

Damaged Items

In the unlikely event of damage occurring in transit, please advise us of this within **24 hours of receipt**, in order that we may claim against the carriers.